


T200S

HIGH-POWER CONTINUOUSLY TUNABLE LASER

- High sweep-speed tunable laser, essential for R&D applications and for testing photonic integrated circuits and optical components.

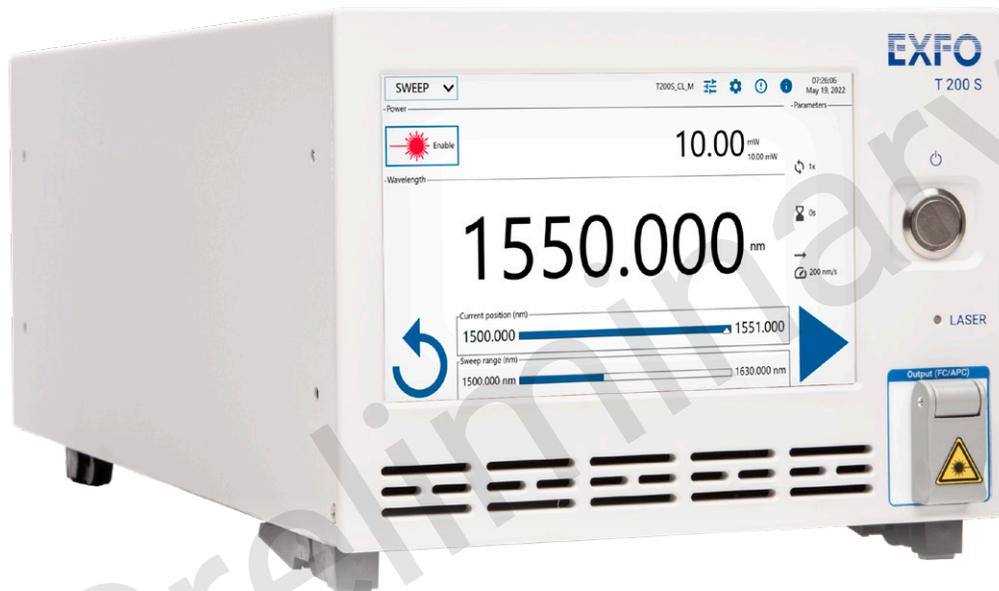

KEY FEATURES

- Up to 200 nm/s scanning speed
- Nominal 10 dBm over full tunable spectral range
- Ultra-low spontaneous emission
- Wavelength coverage: 1500 - 1630 nm
- Compact form factor
- Wavelength tuning and continuous sweep modes
- Active mode-hop-free operation

APPLICATIONS

- Passive optical components
- Photonic integrated circuits
- Multipurpose tunable laser for R&D

RELATED PRODUCTS AND ACCESSORIES



CTP10
component tester



CT440
component tester



T100S-HP
tunable laser

ESSENTIAL FOR OPTICAL SPECTRAL CHARACTERIZATION

A continuously tunable laser is an essential instrument in R&D labs and on production floors. It covers a variety of applications where rapid, continuous wavelength tuning is required.


The T200S laser delivers speed and high power while sweeping in addition to narrow linewidth at fixed wavelengths.

Testing high-speed photonic integrated circuits (PICs)

Integrated photonics can include complex optical components with high-contrast spectrum. For instance, a ring resonator may have very sharp features making it difficult to characterize insertion loss. In addition to insertion loss, some devices require extended measurements of return loss or polarization dependent loss, with the same level of accuracy. Finally, simultaneous testing of a large number of devices or outputs from one single device is also required to speed up PIC characterization.

To test such devices, the T200S laser can be jointly operated with the CTP10, EXFO's component testing platform. With high-resolution and high-accuracy spectral measurement, the CTP10 is an integrated solution that leverages the full potential of the T200S for operations at 200 nm/s sweep speed. The T200S is also compatible with the CT440, EXFO's compact component tester operating at 100 nm/s.

For more details, please refer to the CTP10 or CT440 specification sheets.

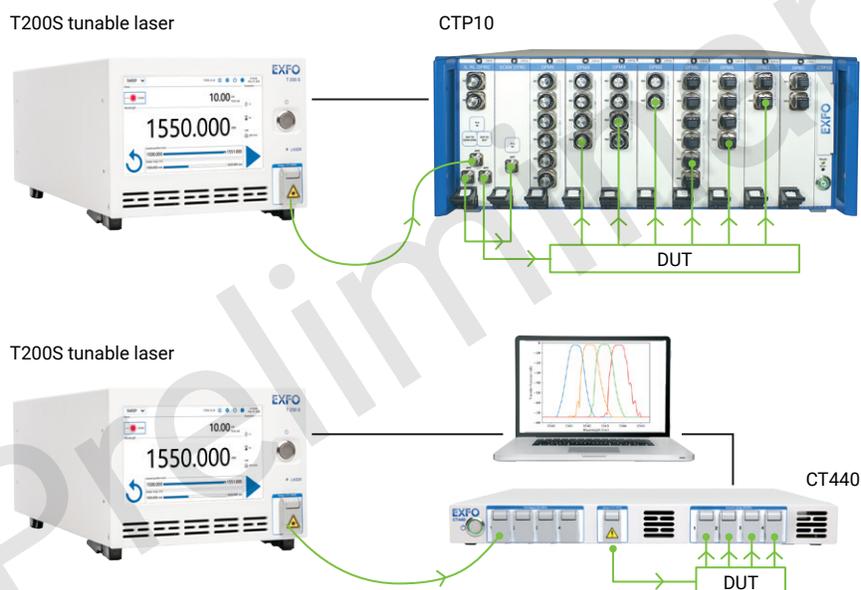

Optical component testing

The T200S builds on previous innovations for tunable lasers such as ultra-low signal-to-source spontaneous emission ratio (SSSER), high-power cavity and mode-hop-free operation. These three parameters are key for high-quality optical component testing, either at specific fixed wavelengths or through a swept wavelength scan.

In labs or on production floors, the test instrument can be easily operated using the large touchscreen with an ergonomic graphical user interface and it can be fully automated using SCPI commands from the Ethernet port at the back of the unit.

Scientific R&D

In R&D environments, continuously tunable lasers are often used in swept wavelength applications but they can also be required to tune to a particular stable wavelength with narrow linewidth.

The T200S has a dedicated tuning mode that optimizes linewidth while maintaining high power stability.

INDUSTRY-LEADING FEATURES

10 dBm output power with high spectral purity

The T200S exhibits a crystal-clear optical spectrum at a nominal optical output power of 10 dBm over the entire tuning range. Indeed, the optical cavity eliminates broadband source spontaneous emission (SSE) without any compromise on optical power.

High spectral purity is maintained throughout the laser sweep thanks to the active mode-hop control, ensuring reliable wavelength sweeps are achieved over and over again.

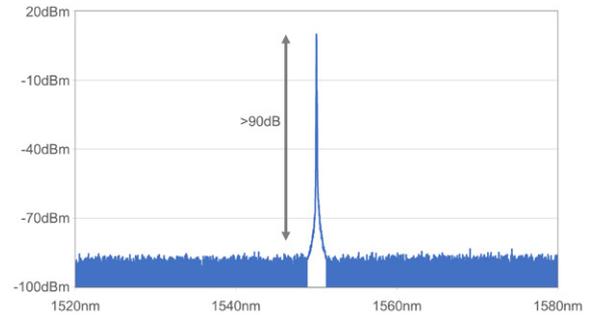


Figure 1. High power and high dynamic range.

High-speed tunability

The T200S can be configured with a 200 nm/s scanning speed as an option. Where speed is critical, the T200S proves an essential addition to ensure repeatable yet fast measurements. Otherwise, the laser can be set to slower scanning speeds (e.g., for legacy detection systems).

Wavelength tuning or continuously swept wavelength scans

The T200S has two user modes: TUNE or SWEEP. Each is optimized for specific usage. TUNE mode optimizes the laser control to ensure narrow linewidth at any wavelength or provide a rapid “go-to” wavelength tuning. SWEEP mode performs high-speed mode-hop-free scans over the selected wavelength range of the laser.

Automation for high precision spectral measurements

The T200S is a key part of a spectral characterization system using EXFO’s component testing equipment (CTP10 or CT440), resulting in a spectral measurement benefiting from a wavelength accuracy of ± 5 pm and excellent wavelength repeatability of the order of 1 pm. Automation of the new laser source is taken care of by these component testing instruments with limited impact on existing automation programs.

As a stand-alone laser, Ethernet control makes it possible to remotely drive the laser from any location. Functionalities such as triggers can be easily accessed from the touchscreen.

Compact and easy-to-use

The half-rack configuration make the T200S an attractive device for lab applications, with limited footprint. The screen can be adjusted to suit dark optical lab environments and display relevant information so that you can see them from the other side of the optical bench.

A rackmount accessory is available to mount one or two lasers inside a 19-in rack bench. With control buttons located at either corners of the screen, operating the laser can be done without even looking at the screen.

Part of the leading series of continuously tunable lasers

The T200S is part of EXFO’s series of continuously tunable lasers that include the T100S-HP, a tunable laser covering the wavelength range from 1240 to 1680 nm.

For more details, please refer to the T100S-HP specification sheet.

SPECIFICATIONS – OPTICAL CHARACTERISTICS

		T200S-CL
Wavelength	Wavelength range (nm)	1500-1630
	Wavelength uncertainty (pm)	±20 (TUNE mode, high accuracy setting) ±5 (when used with CTP10 or CT440)
	Wavelength repeatability (pm)	± 5 ± 1 (when used with CTP10 or CT440)
	Wavelength stability ^a (pm)	±10
	Wavelength resolution setting (pm)	1
Sweep control	Maximum speed (nm/s)	100 (200 optional)
	Adjustable speed (nm/s)	20 to 200 (with option)
	Mode-hop-free operation	Active mode-hop cancellation
Optical power	Nominal output power over full wavelength range (dBm)	+10
	Power stability (dB)	±0.01
Spectral characteristics	Linewidth (10 μs integration time) (kHz) ^b	<100
	Linewidth (100 μs integration time) (kHz) ^b	300
	Side mode suppression ratio (SMSR) (dB)	> 45
	Signal-to-source spontaneous emission ratio (SSSER) ^c (dB)	> 90
	Signal-to-total-source spontaneous emission ratio (STSSER) (dB)	> 70
	Relative intensity noise (RIN) ^d (dB/Hz)	< -140
Optical output	Optical fiber type	PM optical fiber, FC/APC connector Polarization and connector key aligned with slow axis
	PER (dB)	17

All specifications, including when used with CTP10 or CT440, are typical and given at temperature 23°C ± 1°C, after a 60-minute warm-up.

a. Over one hour.

b. In TUNE mode, optimized linewidth setting.


c. Measured over a 0.1 nm bandwidth ±1 nm from the signal.

d. RIN within the range 100 MHz-3 GHz with RBW = 30 kHz.

SPECIFICATIONS – HARDWARE

		T200S-CL
Environmental conditions	Operating temperature	18 °C to 28 °C (64.4 °F to 82.4 °F)
	Operating humidity	<80% (non-condensing)
	Warm-up time (hour)	1
Physical footprint	Size (L x H x D)	217 x 173 x 441 mm (8.54 x 6.81 x 17.36 in)
	Weight	9 kg (19.84 lb)
Connectivity	Monitor	7-in capacitive touchscreen
	Remote communication	Ethernet RJ45 LAN 10/100/1000 Mbit/s
	Electrical BNC ports	1x trigger IN, 1x trigger OUT, power monitoring and wavelength monitoring
	USB ports	USB 3.0 (1), USB 2.0 (2)
Security	Laser safety	Class 1M
	Power supply	100 to 240V AC/ 50 to 60 Hz / 0.65 - 0.3 A
Accessories (sold separately)	Rackmount	4U tablet accommodating 2 units

LASER SAFETY

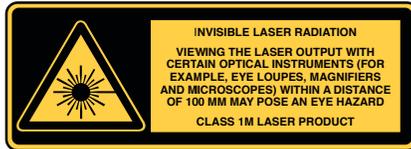

ORDERING INFORMATION

T200S-CL-XX-M-58

Scanning speed

100 = 100 nm/s max sweep speed

200 = 200 nm/s max sweep speed

Example: T200S-CL-200-M-58

EXFO headquarters T +1 418 683-0211 Toll-free +1 800 663-3936 (USA and Canada)

EXFO serves over 2000 customers in more than 100 countries. To find your local office contact details, please go to www.EXFO.com/contact.

For the most recent patent marking information, please visit www.EXFO.com/patent. EXFO is certified ISO 9001 and attests to the quality of these products. EXFO has made every effort to ensure that the information contained in this specification sheet is accurate. However, we accept no responsibility for any errors or omissions, and we reserve the right to modify design, characteristics and products at any time without obligation. Units of measurement in this document conform to SI standards and practices. In addition, all of EXFO's manufactured products are compliant with the European Union's WEEE directive. For more information, please visit www.EXFO.com/recycle. Contact EXFO for prices and availability or to obtain the phone number of your local EXFO distributor.

For the most recent version of this spec sheet, please go to www.EXFO.com/specs.

In case of discrepancy, the web version takes precedence over any printed literature.